

## NBA Truck Dock Clock Distribution, as used in Portland

Parts required:

StarTech [GC98FF](#) and [ICUSB422](#)



Set DIP switches as illustrated:




It's recommended to place a sticker over the switches to prevent accidental changes.

Insert red wire into pin 3 and green into pin 4:



Trim off connectors from unused wires to avoid shorts. Tuck unused wires into adapter housing and snap connector back in place:

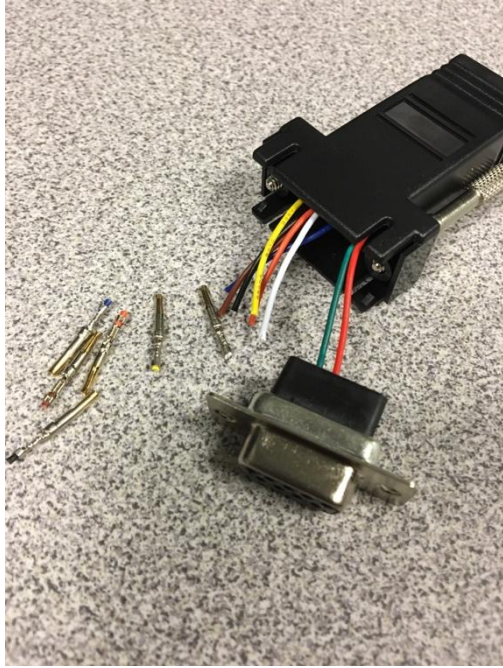



Attach the newly made adapter to the USB adapter and tighten screws.



Use low cost RJ45, factory made cables, from the broadcast panel at truck dock.

<https://www.startech.com/Cables/Serial-Parallel-PS-2/DB9-DB25/DB9-to-RJ45-Modular-Adapter-Female-to-Female~GC98FF>

<https://www.startech.com/Cards-Adapters/Serial-Cards-Adapters/6-ft-1-Port-Professional-RS422-RS485-USB-Serial-Cable-Adapter~ICUSB422>

Document prepared by Brian Conkle [brian.conkle@trailblazers.com](mailto:brian.conkle@trailblazers.com)